



RAPTOR®


TOUGH PROTECTIVE COATINGS

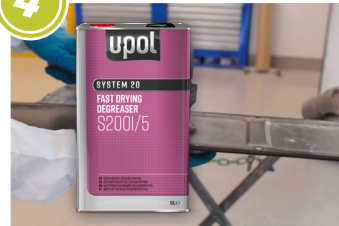



HOW TO REPAIR RAPTOR


- 


REPAIR AREA
We need to repair a dent in RAPTOR.
- 


REMOVE REPAIR AREA
Take off the part which needs to be repaired if you can.
- 


PANEL BEAT DENT
Panel beat the dented area, so that the panel is easier to repair.
- 


DEGREASE
Thoroughly degrease the area to be repaired prior to sanding.
- 


REMOVE DAMAGED RAPTOR
Remove RAPTOR from the damaged area with 80-120 grit abrasive.
- 


DEGREASE AGAIN
Thoroughly blow off the area and degrease again.
- 

APPLY FILLER
Apply your filler to the damaged area.
- 

SAND
Sand to shape when dry with grit 120 to start with and finish off with 180.
- 

ABRADE SURROUNDING AREA
Abrade the surrounding area which is to be recoated with a fine scuff pad and degrease.
- 

TREAT THE METAL
Any bare metal areas should be treated with an appropriate primer.
- 

APPLY ADHESION PROMOTER
Apply a light coat of RAPTOR Adhesion Promoter over the area which has been abraded with a scuff pad for optimum adhesion.
- 

APPLY RAPTOR
Apply a light coat of RAPTOR over the repair area to achieve the required texture.

NOTES: IF USING RAPTOR 2K AEROSOL, WAIT FOR 30 MINS AND APPLY A SECOND EVEN COAT TO ACHIEVE A UNIFORM REPAIR. IF USING A GUN, WAIT FOR 1 HOUR.

WWW.RAPTORCOATINGS.COM

U-POL Ltd, 4th Floor, The Grange, 100 High Street, London N14 6BN.

T: +44 (0)20 8492 5900 E: uk.sales@u-pol.com

U-POL TECHNICAL SUPPORT:

+44 (0) 1933 230310