

# RAPTOR®

## TOUGH PROTECTIVE COATINGS

Products you will need



### HOW TO PREPARE BARE PLASTIC



#### 1 DEGREASE

Thoroughly degrease the substrate with a water-based degreaser such as U-POL System 20 (S2000/5). This removes grease, dirt.



#### 2 SAND

Abrade bare plastic with 180-240 grit.



#### 3 ABRABE SURROUNDING AREA

Any hard to reach areas should be abraded by hand with a fine scuff pad.



#### 4 DEGREASE AGAIN

Once abraded, blow off with compressed air and thoroughly degrease with water based degreaser.



#### 5 WIPE WITH TACK RAG

Wipe the substrate with a tack rag.



#### 6 APPLY RAPTOR

You are now ready to shoot RAPTOR.



### TOP TIPS:




Masking is essential to eliminate the risk of overspray.



Use of solvent based degreaser can swell plastics.



Bare plastic or hard to abrade areas require 1-2 coats of RAPTOR Adhesion Promoter. It can be painted over after 20 mins.

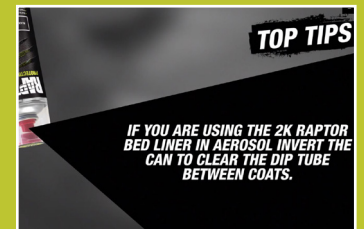

If you are using the 2K RAPTOR Bed Liner in aerosol, invert the can to clear the dip tube in between coats.

[WWW.RAPTORCOATINGS.COM](http://WWW.RAPTORCOATINGS.COM)

U-POL Ltd, 4th Floor, The Grange, 100 High Street, London N14 6BN.

T: +44 (0)20 8492 5900 E: [uk.sales@u-pol.com](mailto:uk.sales@u-pol.com)

**U-POL TECHNICAL SUPPORT:**

**+44 (0) 1933 230310**