



RAPTOR[®]

TOUGH PROTECTIVE COATINGS

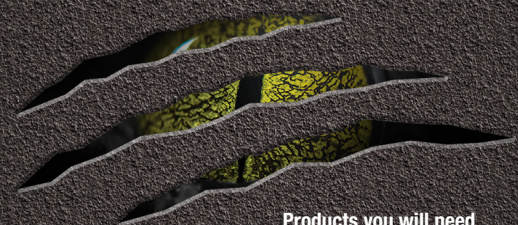

Products you will need

HOW TO PREPARE A TRUCK BED

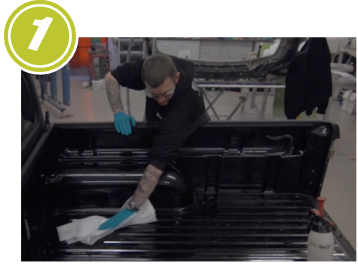

1
DEGREASE
Degrease to remove any contaminants, wax and grease.



2
SAND
Abrade the entire truck bed with 120-180 grit or a nylon cup brush.



3
CLEAN
Using compressed air, remove any excess dust.



4
DEGREASE AGAIN
Degrease the area with a solvent-based degreaser such as WIPE#6 or System 20.



5
ADD ANTI-SLIP
For an anti-slip coating, add one bag of RAPTOR Traction per bottle.



6
APPLY RAPTOR
Directly apply RAPTOR.

NOTES:
WE HAVE REMOVED THE PLASTIC BED LINER AS WATER SITS BETWEEN THE PLASTIC BED LINER AND THE BED AND CORRODES THE BODY WORK.

TOP TIPS:



Grind or remove any rust with a coarse abrasive or a grinder.



When complete, scuff any shiny area with a red scuff pad.



Masking is essential to eliminate the risk of overspray.



RAPTOR 2K Epoxy Primer in aerosol can be useful for smaller areas.

WWW.RAPTORCOATINGS.COM

U-POL Ltd, 4th Floor, The Grange, 100 High Street, London N14 6BN.
T: +44 (0)20 8492 5900 E: uk.sales@u-pol.com

U-POL TECHNICAL SUPPORT:
+44 (0) 1933 230310